

Chicago LED Remote Heads



WARNING:

Risk of Shock. Disconnect Power before Installation.



IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY **INSTRUCTIONS**

- 1. All servicing should be performed by qualified service personnel.
- 2. All unused wires must be insulated to prevent shorting.
- 3. Consult your local building code for approved wiring and installation.
- 4. Do not let power supply cords touch hot surfaces.
- 5. Do not mount near gas or electric heaters.
- 6. Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
- 7. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- 8. Do not use this equipment for other than intended use.
- 9. The voltage rating of this equipment is specified on the label attached to the leads. Do not connect unit to any other voltage.
- 10. Unit to be installed only as per configuration described in this instruction manual.

SAVE THESE INSTRUCTIONS

Installation Instructions



IMPORTANT: Install product no higher than the maximum mounting height of 7 feet from the floor.

- 1. Turn off all power sources.
- 2. Route DC circuit of rated voltage into the junction box and leave 6" wire length.
- 3. Install gasket provided if unit is to be mounted outdoors.
- 4. Make wire connections using the leads on the remote head. Leads have labels attached indicating their polarity. Yellow would be for positive (+) and Blue would be for negative (-).
- 5. Ensure that the voltage rating of the head matches with the DC output voltage of the unit it's being connected to. Connection to the incorrect voltage will cause the heads/unit to not operate or fail.
- 6. Attach the canopy or mounting base to the junction box (not included) using the mounting screws.
- 7. Heads can be rotated sideways (see fig.3) by loosening the horizontal adjustment screw (fig.1) or tilted up/down by loosening the vertical adjustment screw (fig.4).

This unit comes with a (3) three year limited warranty.









